

Upotreba štampača Metapace L-42DT



United Nations Educational, Scientific and Cultural Organization Regional Centre for Library Information Systems and Current Research Information Systems Regionalni center za knjižnične informacijske sisteme in informacijske sisteme o raziskovalni dejavnosti

IZUM

© IZUM, 2024

IZUM, COBISS, COMARC, COBIB, COLIB, CONOR, SICRIS, E-CRIS, COBISS3, mCOBISS, COBISS+, dCOBISS, COBISS4, SGC, COBISS Lib, COBISS Cat, COBISS Ela su zaštićeni znaci u posedu javnog zavoda IZUM.

SADRŽAJ

1	Uvo	od		1
2	Prip	orema	štampača Metapace L-42DT	1
	2.1	Spisal	c opreme	1
	2.2	Opis š	stampača	1
	2.3	Pripre	ma štampača	3
	2.4	Priklju	učivanje i instalacija štampača	6
	2.5	Uprav	ljanje štampačem	6
		2.5.1	Ručna podešavanja	6
		2.5.2	Stanje štampanja i LED indikatora	7
		2.5.3	Programski alat "Label utility"	7
		2.5.4	Kalibrisanje medijuma	7
		2.5.5	Podešavanje mrežnih parametara pomoću priloženog programskog alata	9
		2.5.6	Prenos slika (logotip biblioteke) na štampač	13
3	Pod	ešava	nje drajvera	14
4	Pod	ešava	nje u aplikaciji COBISS Lib	19

Sadržaj slika

Slika 1: Spoljašnjost štampača Metapace L-42DT	1
Slika 2: Unutrašnjost štampača	2
Slika 3: Zadnja stana štampača – priključci	3
Slika 4: Programski alat "Unified Label Utility-II"	8
Slika 5: Programski alat za podešavanje parametara štampača	9
Slika 6: Izbor štampača za podešavanje mrežnih parametara	9
Slika 7: Mrežni parametri (podaci su izmišljeni)	10
Slika 8: Dodavanje mrežnog štampača	10
Slika 9: Unos mrežnih parametara	11
Slika 10: Dodatna podešavanja vrata	11
Slika 11: Izbor upravljačkog programa	12
Slika 12: Izbor verzije upravljačkog programa	12
Slika 13: Štampanje probne stranice	13
Slika 14: Programski alat "Unified Label Utility-II" (slika je simbolična)	13
Slika 15: PCX File Downloader (Unified Label Utility-II)	14
Slika 16: Kontrolna tabla sa štampačima i uređajima	15
Slika 17: Podrazumevane postavke	15
Slika 18: Podešavanje formata nalepnice (New, USER (60,0mm x 40,0mm))	16
Slika 19: Podešavanje položaja ispisa (Horizontal Offset, Vertical Offset)	16
Slika 20: Podešavanje štampanja (Graphics, Dithering)	17
Slika 21: Podešavanje medija (Print Method, Thermal Transfer)	17
Slika 22: Podešavanje mogućnosti štampanja (Darkness, Speed Settings)	18
Slika 23: Drajver Seagull	18
Slika 24: Kontrolna tabla i podešavanje štampanja	19
Slika 25: COBISS Lib korisnički interfejs	19
Slika 26: Korisnički interfejs COBISS Lib i logičke destinacije	20
Slika 27: Editor logičkih destinacija	20
Slika 28: Podešavanje logičkih destinacija	21
Slika 29: Detaljna podešavanja	21
Slika 30: Osvežavanje podešavanja u COBISS Lib korisničkom interfejsu	22
Slika 31: Editor logičkih destinacija za nalepnice za članove	22

1 Uvod

Dokument prikazuje kako koristimo štampač pri radu u COBISS sistemu (priprema i priključivanje štampača, održavanje štampača – menjanje papira i crne trake i sl.).

2 Priprema štampača Metapace L-42DT

2.1 Spisak opreme

Osnovna oprema

- štampač (sivo-plavi, beli)
- CD sa programskom opremom, upravljačkim programom (drajverom) i uputstvima
- USB kabl (ili drugi kabl)
- uređaj za napajanje
- kabl za napajanje (220 V)
- prazna čaura za namotavanje crne trake

Moguća dodatna oprema:

- spoljašnji nosač nalepnica
- nož
- modul za uklanjanje nalepnica (eng. *Peel-off*)

2.2 Opis štampača



Slika 1: Spoljašnjost štampača Metapace L-42DT

- 1. Providni poklopac crne trake
- 2. Dugme za otvaranje gornjeg poklopca
- 3. Tipka FEED/CANCEL za pomeranje trake sa nalepnicama ili prekidanje operacije
- 4. Tipka PAUSE za zaustavljanje štampanja



Z Slika 2: Unutrasnjost stampača

- 1. Poklopac prostora za dodatnu opremu
- 2. Gumeni valjak
- 3. Senzor razmaka između nalepnica (prijemnik)
- 4. Nosač koluta sa nalepnicama
- 5. Zatvarač položaja nosača nalepnica
- 6. Poklopac štampača
- 7. Glava štampača
- 8. Senzor razmaka između nalepnica (predajnik)

9. Senzor crne trake na nalepnici



Slika 3: Zadnja stana štampača – priključci

- 1. Priključak za napajanje
- 2. Serijski ulaz RS232C (za priključivanje na računar)
- 3. USB ulaz, tip A (samo za priključivanje bežičnog mrežnog interfejsa)
- 4. Mrežni ulaz (za priključivanje na lokalnu mrežu)
- 5. USB ulaz, tip B (za priključivanje na računar)

2.3 Priprema štampača

Postavljanje crne trake

1. Otvorimo poklopac štampača i postavimo crnu traku, i to najpre na oprugu (desno).



2. Plastični providni poklopac crne trake otvorimo tako što povučemo u smeru strelice na poklopcu i postavimo prazan kolut crne trake.



3. Crnu traku provucite i pričvrstite na prazan kolut.



- 4. Nazubljenim točkićem navijte prazan deo trake na prazan kolut.
- 5. Zatvorite poklopac crne trake i poklopac štampača.

Nameštanje nalepnica

1. Pritiskom na dugme na obe strane štampača otvorite poklopac.



2. Rastegnite oba nosača koluta sa nalepnicama i između ubacite kolut sa nalepnicama.



3. Tokom postavljanja koluta sa nalepnicama početni deo trake provucite između vođica.



4. Zatvorite poklopac.

2.4 Priključivanje i instalacija štampača

Štampač METAPACE L-42DT možemo priključiti na četiri načina. Možemo ga povezati sa računarom pomoću USB kabla tipa B (priložen) ili serijskog priključnog kabla. Na mrežu ga možemo priključiti pomoću mrežnog kabla (RJ45). Za upotrebu štampača na više radnih stanica preporučujemo priključivanje na lokalnu mrežu.

Pri instalaciji štampača koristimo upravljački program koji možete naći:

- na priloženom CD-u ili
- na COBISS web strani pod "Preporučena oprema"¹

Štampač ima tipke FEED/CANCEL i PAUSE i dva trobojna LED indikatora. LED indikatori prikazuju različite načine rada i obaveštavaju nas o greškama. Tipkom FEED/CANCEL možemo pomerati nalepnice napred, pokrenuti testiranje, kalibrisanje i inicijalizaciju (podešavanje na fabričke vrednosti), a tipkom PAUSE možemo zaustaviti štampanje.

Za pomoć u radu sa štampačem pozovite pozivni centar +386 2 2520 333 ili pošaljite poruku na e-adresu <u>podpora@izum.si</u>.

2.5 Upravljanje štampačem

2.5.1 Ručna podešavanja

Za menjanje podešavanja koristimo tipke FEED/CANCEL i PAUSE i opažamo LED indikatore:

Stanie štamnača	Tij	pka		Naziv operacije koja
pre operacije	FEED / CANCEL	PAUSE	Postupak operacije	se izvodi
isključen	pritisnuta	_	Uključimo štampač i držimo tipku dok se testiranje ne pokrene.	automatsko testiranje rada štampača
u pripravnosti	pritisnuta	-	Na kratko pritisnemo tipku	pomeranje napred
u pripravnosti	_	pritisnuta	Pritisnemo tipku za 2 sekunde.	ulazak u podešeni način rada
u toku štampanja	pritisnuta	-	Pritisnemo tipku za 2 sekunde i držimo.	prekid štampanja
u toku štampanja	_	pritisnuta	Na kratko pritisnemo tipku	privremeni prekid štampanja

¹ <u>http://www.seagullscientific.com/drivers/printer-driver-features/?m=metapace+1-42dt</u>

LED 1		LEI	02	Stanie štampača	
Boja	Stanje	Boja	Stanje	- Stanjt	, stampata
zelena	svetli	zelena	svetli	u pripravnosti	u pripravnosti
crvena	svetli	crvena	svetli	greška	crna traka nije detektovana
crvena	svetli	narandžasta	svetli	greška	nalepnice - ne detektuje razmak
crvena	svetli	zelena	trepti	greška	pregrevanje glave
crvena	svetli	crvena	trepti	greška	otvoren poklopac
crvena	svetli	narandžasta	trepti	greška	nema nalepnica
crvena	svetli	-	ugašena	greška	greška pri kalibrisanju
crvena	trepti	crvena	trepti	greška	greška rezača
narandžasta	svetli	narandžasta	svetli	upozorenje	podešavanje prekidača
zelena	trepti	crvena	svetli	čeka na komandu	privremeni prekid štampanja
zelena	trepti	zelena	trepti	čeka na komandu	zatvoren poklopac
zelena	svetli	crvena	trepti	čeka na komandu	prekinuto štampanje

2.5.2 Stanje štampanja i LED indikatora

2.5.3 Programski alat "Label utility"

Alat Label utility nalazi se na priloženom CD-u. Pomoću njega možemo:

- 1. podesiti serijski interfejs (HandShake, Stop bit, Data bit, brzinu),
- 2. postaviti osnovna podešavanja štampača (veličinu papira, brzinu i gustinu štampanja, tip papira, upotrebu crne trake),
- 3. izabrati jezik (tabele sa kodovima),
- 4. kalibrisati senzore (ručno podešavanje za materijale)
- 5. i ostalo.

Više smernica nalazi se na priloženom CD-u u uputstvima "Metapace_Label_Unified_Utility" u direktorijumu "Utilities".

2.5.4 Kalibrisanje medijuma

Štampač radi tako da sam prepoznaje dužinu razmaka između nalepnica. Za ovaj postupak iskoristiće tri nalepnice pri prvom štampanju. Ako nalepnice uprkos tome ne bude prepoznao, funkciju kalibrisanja možete ručno aktivirati. Pri izvođenju ove operacije štampač:

- 1. podešava senzor za prepoznavanje nalepnica i meri dužinu,
- 2. podešava senzor za prepoznavanje razmaka između nalepnica i meri dužinu.

Kalibrisanje medijuma neophodno je pri prvom pokretanju štampača, pri menjanju formata nalepnica i kada štampač ne štampa u propisanom prostoru (pomaknuto štampanje).

Način pokretanja kalibrisanja:

- 1. Ulazak u ručni način kalibrisanja: kada je štampač uključen pritisnemo tipku PAUSE za dve sekunde. Oba LED indikatora menjaju boju iz zelene u narandžastu.
- 2. Boje LED indikatora počinju da se menjaju i pritiskom na tipku FEED pokreće se željena operacija kalibrisanje (LED 1 svetli narandžasto, a LED 2 četiri puta zeleno trepne).

Više o kalibrisanju možete pročitati u originalnim uputstvima u poglavlju "5. Detailed features" na strani 20.

2.5.4.1 Kalibrisanje medija pomoću priloženog programskog alata

Postupak:

- 1. Štampač priključimo preko željenog ulaza (serijski, USB ili ethernet).
- 2. Pokrenemo programski alat "Unified Label Utility-II.exe", koji se nalazi na priloženom CD-u, ili ga preuzmemo sa web stranice ².
- 3. Izaberemo ulaz za priključivanje i kliknemo dugme "Connect".

Interface Type		User Setting
Serial	Parallel O USB O Ethernet	Configure Printer Setting
Communication	Setting	Configure Print Quality
LPT Port	LPT1: v	Calibration Setting Manager
COM Dort		Downloader
COMPORT		PCX File Downloader
Baud Rate	115200 🔻	Printer Tool
Data Bits	8	Send File
Parity	None	Printer Tool
Stop Bits	1	Communication Tool
TD	192 . 168 . 100 . 185	SLCS Test Tool
16		RFID
Port	9100	Set Configuration Write/Read
C	onnect Disconnect	
		EXIT

Slika 4: Programski alat "Unified Label Utility-II"

VOS

² <u>http://www.jarltech.de/2007/support.php?gotoartikel=metapace_1-</u>

⁴²dt&sort=kategorie&language=en&kat_id=2200&link=2&supportdata=metapace_1-42dt-en

2.5.5 Podešavanje mrežnih parametara pomoću priloženog programskog alata

Postupak:

1. Štampač priključimo preko ethernet ulaza.

Pokrenemo instalaciju programskog alata "Net Configuration Setup", koji se nalazi na priloženom CD-u, ili ga preuzmemo sa COBISS web strani pod "Preporučena oprema".

2. Pokrenemo program i izaberemo dugme "Ethernet Configuration".

2	Net Configuration	<
	Ethernet Configuration	
	WLAN Configuration	
	Serial/USB Configuration (For mobile WLAN)	
	Exit	

Slika 5: Programski alat za podešavanje parametara štampača

3. Kliknemo dugme "Search". Ako su štampač i računar na kojem je instaliran alat u istoj lokalnoj mreži, program će detektovati štampač. Pojavljuje se na spisku pod odgovarajućom MAC adresom. MAC adresu možemo naći na nalepnici na zadnjoj strani štampača.

			Net Configu	ration Tool			×
No	Mac Address	IP Address	Subnet	Gateway	Port	Version	Search
1	00:15:94:60:3e:56	10.1.10.209	255.255.0.0	10.1.0.1	9100	N/A	Setting
							Configuration(Web)
							Exit

Slika 6: Izbor štampača za podešavanje mrežnih parametara

4. Označimo štampač i kliknemo "Setting". Pojaviće se prozor sa mrežnim podešavanjima koja za štampač dobijamo od administratora lokalne mreže.

	Etherr	net Configuration	×
	-Network Setting-		
	IP Address :	10 . 1 . 10 . 209	
	Subnet Mask :	255 . 255 . 0 . 0	
	Gateway :	10 . 1 . 0 . 1	
	Local Port :	9100 (0 ~ 32767)	1
	Inactivity time :	0 sec (Default: 0)	
	(0 ~ 3600)	□ DHCP Mode	
	Device Baudrate :	19200 🔻	
	Fimware Version :	N/A	
[Save	Cancel	

Slika 7: Mrežni parametri (*podaci su izmišljeni*)

- 5. Instaliramo upravljački program štampača³ i ponovo pokrenemo računar.
- 6. V Kontrolnom panelu kod Uređaji i štampači izaberemo Dodavanje štampača preko IP adrese.

And a second sec	×
G 🖶 Add Printer	
Find a printer by name or TCP/IP address	
<u>Find a printer in the directory</u> , based on location or feature	
Select a shared printer by name	
	B <u>r</u> owse
Example: \\computername\printername or http://computername/printers/printername/.printer	
Add a printer using a TCP/IP address or hostname	
Nex	t Cancel

Slika 8: Dodavanje mrežnog štampača

7. U polje "Hostname or IP address" unosimo IP adresu.

³ <u>http://www.seagullscientific.com/drivers/printer-driver-features/?m=metapace+1-42dt</u>

🚱 🖶 Add Printer	
Type a printer hostname	or IP address
Device <u>t</u> ype:	Autodetect 🔹
Hostname or IP <u>a</u> ddress:	10.1.10.209
<u>P</u> ort name:	10.1.10.209_1
Query the printer and automa	tically select the driver to use
	Next Cancel

Slika 9: Unos mrežnih parametara

8. Potvrđujemo dodatne informacije o vratima.

		x
Add Printer		
Additional port	information required	
The device is not	found on the network. Be sure that:	
 The device is t The network is The device is j The devices o The address o If you think the address and perford device type below 	rurned on. s connected. oroperly configured. n the previous page is correct. ddress is not correct, click Back to return to the previous page. Then correct the orm another search on the network. If you are sure the address is correct, select y.	the
Device Type		_
Standard	Generic Network Card	
© <u>C</u> ustom	S <u>e</u> ttings	
	Next	ancel

Slika 10: Dodatna podešavanja vrata

9. Izaberemo proizvođača METAPACE i model L-42DT

and an and printer o	lriver		
Choose your p	rinter from the list. Click W	indows Update to see more m	odels.
To install the d	driver from an installation C	D, click Have Disk.	
Manufacturer	 Printers 		
Lexmark	METAP/	ACE L-23D	
METADACE	📩 🖾 METAPA	ACE L-42D	=
METAPACE			
Microsoft		ACE L-42DT	
METAPACE Microsoft NRG		ACE L-42DT ACE L-42T	
METAPACE Microsoft NRG		ACE L-42DT ACE L-42T	-

Slika 11: Izbor upravljačkog programa

				×
🚱 🖶 Add Printer				C
Which version o	f the driver do you want to	use?		
Windows detected th	at a driver is already installed for th	is printer.		
Use the driver that	is currently installed (recommend	ed)		
Replace the current	t driver			
			Next	ancel

Slika 12: Izbor verzije upravljačkog programa

10. Možemo da proverimo da li je instalacija uspešna, tako što ćemo odštampati probnu stranicu.

	Fonts		Tools	Abo	About	
General	Sharing	Ports	Advanced	Color Management	Security	
3	META	PACE L-42	т			
Location:						
<u>C</u> ommen	t					
M <u>o</u> del:	META	PACE L-42D	т			
_	5					
Feature						
-Feature Color:	No		Paper a	available:		
- Feature Color: Double	No -sided: No		Paper a	available:	^	
Feature Color: Double Staple:	No -sided: No No		Paper a	available:	^	
- Feature Color: I Double Staple: Speed:	No -sided: No No Unknown		Paper a	available:	^	
Feature: Color: Double Staple: Speed: Maxim	No sided: No No Unknown um resolutio	on: 203 dpi	Papera	available:	< >	
Feature Color: Double Staple: Speed: Maxim	No sided: No No Unknown um resolutio	on: 203 dpi	Paper a	available:	< >	

Slika 13: Štampanje probne stranice

2.5.6 Prenos slika (logotip biblioteke) na štampač

Postupak prenosa slika na štampač:

- 1. Pokrenemo programski alat "Unified Label Utility-II.exe", koji se nalazi na priloženom CD-u, ili ga preuzmemo sa web stranice ⁴.
- 2. Izaberemo ulaz za priključivanje i kliknemo dugme "Connect".

menace rype				User Setting
Serial	Parallel	O USB	Ethernet	Configure Printer Setting
Communication	Setting			Configure Print Quality
LPT Port	LPT1:			Calibration Setting Manager
				Downloader
COM Port	COM1:			PCX File Downloader
Baud Rate	115200			/ Drinter Teal
Data Bits	8			Send File
Parity	None			Printer Tool
Stop Bits	1			Communication Tool
IP	10 .	1.	10 . 209	SLCS Test Tool
-				RFID
Port	9100			Set Configuration Write/Read
	Connect	Disc	ronnect	
				EXIT

Slika 14: Programski alat "Unified Label Utility-II" (slika je simbolična)

⁴ http://www.jarltech.de/2007/support.php?gotoartikel=metapace_l-

⁴²dt&sort=kategorie&language=en&kat_id=2200&link=2&supportdata=metapace_1-42dt-en

[©] IZUM, 25. 3. 2024, VOS-NA-XX-127, V5.0

3. Kliknemo dugme "PCX File Downloader" nakon čega će se pojaviti prozor:

PCX File Downloader
Image Store (IS)
Image Name :
PCX File Information
File Name: None
File Size: 0 Byte
DownLoad
Image Delete (ID)
Image Name :
Delete Image Delete All Images
Image Information (II)
Image Information
Image Recall (IR)
Image Name :
X Position : 0 Y Position : 0
Image Recall CLOSE

Slika 15: PCX File Downloader (Unified Label Utility-II)

4. Potražimo i pokažemo na željenu datoteku (*.pcx) i kliknemo "Download".

Brisanje slika: Umesto dugmeta "Download" koristimo dugme "Delete Image".

3 Podešavanje drajvera

Kada je upravljački program za štampač instaliran, pre štampanja nalepnica treba ažurirati podešavanja na štampaču METAPACE L-42DT. To izvodimo u **Komandnoj tabli** (**Control panel**) gde izaberemo **Uređaji i štampači (Devices and printers**). Prikazaće se svi štampači koji su na raspolaganju. Izaberemo štampač METAPACE L-42DT i kliknemo na njega desnim tasterom miša. U dodatnim mogućnostima izaberemo mogućnost **Svojstva štampanja** (**Printer Properties**) (Slika 16).



Slika 16: Kontrolna tabla sa štampačima i uređajima

Kada kliknemo na **Svojstva štampača**, otvara se novi prozor u kojem izaberemo jezičak **Napredno (Advanced).** Na jezičku **Napredno (Advanced)** izaberemo opciju **Podrazumevane postavke (Printing Defaults...)** (Slika 17).

HETAPACE L-42DT Properties								
Security General	Fo	nts Ports Ad	Tools Ivanced	Color Ma	About anagement			
Always a	Always available							
⊖ Availa <u>b</u> le	O Available from 00:00 ♣ To 00:00 ♣							
Priorit <u>y</u> :	1							
Driver:	METAPACE L-4	2DT		∼ Ne <u>w</u>	Driver			
○ S <u>t</u> art	 Start printing after last page is spooled Start printing immediately Print directly to the printer 							
<u>H</u> old mis	matched docur	nents						
✓ P <u>r</u> int spo	oled document	s first						
<u>K</u> eep prin	<u>K</u> eep printed documents							
✓ Enable advanced printing features								
Printing [Printing Defaults Print Processor Separator Page							
[ОК	Cancel	Ар	ply	Help			

Slika 17: Podrazumevane postavke

Na prvom jezičku (**Page Setup**) podešavamo format nalepnice tako što kliknemo na **New** i unesemo odgovarajući format nalepnice npr. *USER* ($60,0 \text{ mm} \times 40,0 \text{ mm}$) koji nakon toga izaberemo kao podrazumevani format (Slika 18).

	METAPACE L-42DT Printing Defaults				
Page Setup Stock Name:	Graphics Stock Options About New Stock (60,0 mm x 40,0 mm)				
	New	Edit	D	elete	
Preview	Orientation Portrait Candsca Portrait 1 Candsca	ре 80° ре 180°	Effects Mirror Image Negative		
Preset Name:	<current settings=""></current>		✓ M:	anage	
© 2015-2022 Seagull Scientific, Inc., Authors of the BarTender® label software.					

Slika 18: Podešavanje formata nalepnice (New, USER (60,0mm x 40,0mm))

Ako kliknemo na **Advanced Options...**, možemo da podesimo položaj početka štampanja i tako popravimo položaj ispisa na nalepnici. Najbolje je ako je početni položaj 0.0 mm, 0.0 mm (Slika 19).

Advanced Options	×
Printing Position User Commands Driver Options Passthrough Position Adjustment Horizontal Offset 1.0 mm Vertical Offset D.0 mm Orientation Adjustment Default Orientation: 0*	
OK Cancel Apply Help	

Slika 19: Podešavanje položaja ispisa (Horizontal Offset, Vertical Offset)

Na drugom jezičku (Graphics) podešavamo međutonove (eng. Dithering) na None (Slika 20).

METAPACE L-42DT Printing Defaults					
Page Setup Graphics Stock Options About					
Resolution:	Resolution: 8,0 dpmm x 8,0 dp				\sim
Dithering					
			Non Half	e tone	
-i.		at a	Orde	ered	
	۴ r	ġ.	Algebraic		
		- -	Erro	r Diffusion	
			ODevi	ice Dithering	
Color Adju	istment			Dithering Setu	p
Color					
Color Control:	Monoch	ome			\sim
Color Matching:					\sim
Color Regi	stration			Color Setup	
ОК		Cance	el	Apply	Help

Slika 20: Podešavanje štampanja (Graphics, Dithering)

Na trećem jezičku (**Stock**) podešavamo metodu štampanja na termički prenos (**Thermal Transfer**) (Slika 21).

HETAPACE L-4	METAPACE L-42DT Printing Defaults ×						
Page Setup Graph	hics Stock Options About						
Media Settings							
Print Method:	Print Method: Thermal Transfer ~						
Media Type:	Use Current Printer Setting ~						
Feed Mode	Feed Mode						
Mode: Us	e Current Printer Setting V Pause After Cut						
Pause: No	No Pause ~ Interval:						
Feed Options Set Top Adjustment Set Tear-Off Adjustment							
	OK Cancel Apply Help						

Slika 21: Podešavanje medija (Print Method, Thermal Transfer)

Na četvrtom jezičku (**Options**) aktiviramo mogućnost podešavanja za istaknuto štampanje (**Darkness**) i brzinu štampanja (**Speed Settings**). Istaknuto podesimo na 25, brzinu podesimo na 76.20mm/sec (Slika 22).

METAPACE L-42DT Printing Defaults	×					
Page Setup Graphics Stock Options About						
Use Current Printer Settings Relative Absolute						
Darkness: 25						
Speed Settings Use Current Printer Settings						
Print 76.20 mm/sec V						
Slew:						
Backfeed: V						
Graphics Options						
Encoding: Automatic ~						
OK Cancel Apply Help						

Slika 22: Podešavanje mogućnosti štampanja (Darkness, Speed Settings)

Korišćen je drajver Seagull: <u>http://www.seagullscientific.com/drivers/printer-driver-features?m=metapace+1-42dt</u> (Slika 23).

HETAPACE L-42DT Properties ×					
General	Sharing	Ports	Advanced	Color Ma	nagement
Security		Fonts	Tools		About
	Create, a barcode	BarT automate a s, RFID tag	SEAGULL SCIENTIFIC Ind manage la is and more.	abels,	
	labels	barcodes	RFID	cards	
	Do v	ownload the l vww.SeagullS	atest drivers at: 5cientific.com		
Copyright©20 Seagull Scienti	15-2022 fic, Inc. OK	Canc	License] <u>V</u> er	sion Help

Slika 23: Drajver Seagull

Predlažemo da ista podešavanja izvedete i kod opcije Izbori pri štampanju (Printing preferences).



Slika 24: Kontrolna tabla i podešavanje štampanja

4 Podešavanje u aplikaciji COBISS Lib

Da bismo koristili štampače u COBISS Lib, prethodno moramo da se instaliramo servis COBISS DGW. <u>https://www.cobiss.net/doc/Namescanje_COBISS_DGW_XX.pdf</u>

Uspešnost instalacije u COBISS Lib možemo da proverimo metodom **Podešavanja i** administracija / Server / Testiraj vezu sa COBISS DGW. Poruka *COBISS DGW je povezan!* ukazuje na to da je instalacija uspešna i da možemo nastaviti sa dodavanjem štampača u logičke destinacije (Slika 25).

COBISS Lib - IZUM_PP	x +	- 🗆 X
← → ♂ to cs.cobiss.n	et/clib/izum_pp/	◎ C ☆ 팩 소 Ⅱ 🔹 :
= 🕻 COBISSLib	IZUM_PP	🔊 🛱 🗭 🏰 ? 🛔 sys_miranl 🗭
Active search windows	1 HL Home library	7 Ex Examination of personal data processing (ZVOP)
€ AcquisitionsGerials	P Partner +	 Show personal data processing – all users Show personal data processing – selected user (summary data)
Electronic resources	3 Contact	 Show personal data processing – selected user Show personal data processing – selected member Print Report on the examination of personal data
Holdings	4 U User	processing 8
Interlibrary Ioan	s COLIB	Me Messages O Send a message to all users O Read last message
Administration	6 Se Settings	Prepare COBISS + notification Send suggestions and remarks
	Course editor Job editor Job editor User destinations Logical destinations Set job editor Set date for loan procedures Set search filter for de-accessioned material Set up shorturs for procedures RFID device/protection status Profiles – view, edit	Server Change passwords Refresh settings Show server errors Show schwides log System properties Server information Shov logged in system users Set the login level Ets connection with COBISS DGW

Slika 25: COBISS Lib korisnički interfejs

U COBISS Lib izaberemo **Podešavanja i administracija / Podešavanja / Logične destinacije** (Slika 26).



Slika 26: Korisnički interfejs COBISS Lib i logičke destinacije

Otvara se novi prozor **Editor logičkih destinacija** u kojem izaberemo mogućnost *Nalepnica – građa: [podrazumevani lokalni štampač]* i kliknemo dugme **Uredi** (Slika 27).

Logical destinations editor	×
Logical destinations	*
Labels – Partner: [default local printer]	
Delivery note – ILL: [default local printer]	
Internal order – ILL: [default local printer]	
Apportionment – Acquisitions: [default local printer]	
Label – material: [default local printer]	
Label – material, 50 x 25: [default local printer]	
Label – material, 75 x 50: [default local printer]	
Delivery note (for Accounting) – ILL: [default local printer]	
Printer – Loan: [default local printer]	
	-
Edit Default (description) OK Car	ncel

Slika 27: Editor logičkih destinacija

Otvara se prozor **Korisničke destinacije** u kojem kliknemo dugme **Dodaj štampač**. U novom prozoru sa padajućeg spiska izaberemo štampač *METAPACE L-42DT*, kojim nameravamo da štampamo nalepnice za građu (Slika 28).

User destinations			×
Destinations			
		Add e-ma	il
		Add printe	er
	From personal address book		
	Edit		
	Remove		
		ОК	Cancel
Printer			×
Printer			
METAPACE L-42DT			~
Number of copies			
1			
Details		ОК	Cancel

Slika 28: Podešavanje logičkih destinacija

Kada izaberemo štampač, kliknemo na dugme **Detalji** da bismo proverili da li su detaljna podešavanja za ovaj tip štampača pravilna (Slika 29).

Details	×
Printing mode	
graphics	~
Printer type	
	~
Printer subtype	
	~
Printing style	
single sided	~
Orientation	
portrait	~
ок	Cancel

Slika 29: Detaljna podešavanja

Kada odredimo sva podešavanja, svaki izbor potvrđujemo klikom na dugme **U redu**. Na kraju u meniju **Sistem** izaberemo **Osveži podešavanja** (Slika 30). Ako ova mogućnost nije na raspolaganju, nova podešavanja osvežavamo tako što se odjavimo i ponovo prijavimo u programsku opremu COBISS Lib.



Slika 30: Osvežavanje podešavanja u COBISS Lib korisničkom interfejsu

Sada možemo početi da štampamo nalepnice za građu.

Ako na istom štampaču želimo da štampamo i nalepnice za članove, postupak je isti kao što je opisano u prethodnim koracima, s tom razlikom da podešavamo logičku destinaciju *Nalepnica – Pozajmica (član)* (Slika 31).

Logical destinations editor	×
Logical destinations	
Delivery note (for Accounting) – ILL: [default local printer]	
Printer – Loan: [default local printer]	
Overdue notices (envelopes) – Loan: [default local printer]	
Lending form – Loan: [default local printer]	
Label – Loan (member): (Printer: METAPACE L-42DT) [default local printer]	
Printer - cash register drawer: [default local printer]	
Plastic membership card – Loan (member): [default local printer]	
Invoice – Loan: [default local printer]	
Edit Default (description) OK Car	ncel

Slika 31: Editor logičkih destinacija za nalepnice za članove